

CAUTION

- ONLY USE THE RICE COOKER SCOOP PROVIDED. AVOID USING SHARP UTENSILS.
- DO NOT EXPOSE THE RICE COOKER TO HIGH TEMPERATURE, NOR PLACE IT ON A WORKING OR STILL HOT STOVE OR COOKER.
- ALWAYS INSERT THE INNER POT BEFORE YOU PUT THE PLUG IN THE WALL SOCKET.
- ALWAYS UNPLUG THE RICE COOKER AND LET IT COOL DOWN BEFORE YOU CLEAN IT.
- DO NOT PLACE THE INNER POT DIRECTLY OVER AN OPEN FIRE TO COOK RICE.
- THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY. IF THE APPLIANCE IS USED IMPROPERLY OR FOR PROFESSIONAL OR SEMI-PROFESSIONAL PURPOSES OR IF IT'S NOT USED ACCORDINGLY TO THE INSTRUCTION IN THIS USER MANUAL, THE GUARANTEE BECOMES INVALID.
- PLACE THE RICE COOKER ON A STABLE, HORIZONTAL AND LEVEL SURFACE.
- THE ACCESSIBLE SURFACES MAY BECOME HOT WHEN THE APPLIANCE IS OPERATING.
- BEWARE OF THE HOT STEAM THAT COMES OUT OF THE STEAM VENT DURING COOKING OR OUT OF THE RICE COOKER WHEN YOU OPEN THE LID.
- ALWAYS UNPLUG THE APPLIANCE AFTER USE.
- DO NOT LIFT AND MOVE THE RICE COOKER BY ITS HANDLE WHEN IT IS OPERATING.

WHITE RICE

1. WASH THE RICE THOROUGHLY.
2. PUT THE PRE-WASHED RICE IN THE INNER POT.

3. ADD WATER TO THE LEVEL INDICATED ON THE SCALE INSIDE THE INNER POT.
4. THAT CORRESPONDS TO THE NUMBER OF CUPS OF RICE USED, THEN EVEN OUT THE RICE SURFACE.
5. FOR INSTANCE, IF YOU COOK 2 CUPS OF RICE, ADD WATER UP TO THE 2-CUP LEVEL INDICATED ON THE SCALE OF THE INNER POT.

PRESS “WHITE RICE” BUTTON, AND POWER LIGHTS BECOMES STABLE. WHEN THE COOKING PROCESS IS FINISHED, YOU WILL HEAR A BEEP. THE COOK LIGHT GOES OUT AND THE KEEP WARM LIGHT COMES ON TO INDICATE THAT THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO KEEP-WARM MODE.

CONGEE

1. FOLLOW STEP 1 TO 5 IN COOKING RICE FUNCTION.
2. PRESS THE “CONGEE” BUTTON AND LIGHT INDICATED BECOME STABLE.
3. WHEN THE COOKING PROCESS IS FINISHED, YOU WILL HEAR A BEEP.
4. THE COOK LIGHT GOES OUT AND THE KEEP-WARM LIGHT COMES ON TO INDICATE THAT THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO THE KEEP-WARM MODE.

BROWN RICE

1. FOLLOW STEP 1 TO 5 IN COOKING RICE FUNCTION.
2. PRESS THE “BROWN RICE” BUTTON AND LIGHT INDICATED BECOME STABLE.
3. WHEN THE COOKING PROCESS IS FINISHED, YOU WILL HEAR A BEEP.
4. THE COOK LIGHT GOES OUT AND THE KEEP-WARM LIGHT COMES ON TO INDICATE THAT THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO THE KEEP-WARM MODE.

BABY FOOD

1. FOLLOW STEP 1 TO 5 IN COOKING RICE FUNCTION.
2. PRESS THE “BABY FOOD” BUTTON AND LIGHT INDICATED BECOME STABLE.
3. WHEN THE COOKING PROCESS IS FINISHED, YOU WILL HEAR A BEEP.

4. THE COOK LIGHT GOES OUT AND THE KEEP-WARM LIGHT COMES ON TO INDICATE THAT THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO THE KEEP-WARM MODE.

REHEAT

YOU CAN USE THE “REHEAT” MODE TO WARM UP RICE THAT HAS COOLED DOWN. FILL THE INNER POT NOT MORE THAN HALF OF ITS CAPACITY TO ENSURE THAT THE RICE IS HEATED UP PROPERLY.

1. LOOSEN THE COOLED RICE AND EVENLY DISTRIBUTED IN THE INNER POT.
2. POUR LITTLE WATER ONTO THE RICE TO PREVENT IT FROM BECOMING TOO DRY. THE AMOUNT OF WATER TO BE ADDED DEPENDS ON THE AMOUNT OF RICE BEING REHEATED. (IF THE RICE STARTS SCORCHING, ADD MORE WATER)
3. PRESS THE “REHEAT” BUTTON, THE REHEAT LIGHT GOES ON AND REHEATING PROCESS STARTS.

WHEN THE REHEATING PROCESS IS FINISHED, YOU WILL HEAR A BEEP. LIGHT GOES OUT AND THE KEEP-WARM LIGHT GOES ON TO INDICATE THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO KEEP-WARM MODE.

*NOTE: COOL RICE SHOULD NOT BE REHEATED MORE THAN ONCE.

SOUP

PUT THE INGREDIENTS AND WATER IN THE INNER POT. DO NOT EXCEED THE MAXIMUM WATER LEVEL INDICATED INSIDE THE INNER POT ON THE SCALE FOR PORRIDGE COOKING.

1. PRESS THE “SOUP” BUTTON TO START THE SOUP COOKING PROCESS. THE LIGHT GOES ON AND THE COOKING PROCESS START. WHEN THE COOKING PROCESS FINISHED, YOU WILL HEAR A BEEP. THE COOK

LIGHT GOES OUT AND THE KEEP-WARM LIGHT GOES ON TO INDICATE THE RICE COOKER HAS AUTOMATICALLY SWITCHED TO KEEP-WARM MODE.

KEEP WARM

THIS MODE ALLOWS YOU TO KEEP YOUR RICE WARM FOR A LONGER PERIOD OF TIME. PRESS THE KEEP WARM/OFF BUTTON TWICE TO ACTIVATE THE KEEP-WARM MODE.

*NOTE: WE ADVISE YOU TO KEEP RICE WARM FOR NOT MORE THAN 12 HOURS SO AS TO PRESERVE ITS BEST AROMA AND TASTE.

CLEANING

UNPLUG THE RICE COOKER BEFORE STARTING TO CLEAN IT. WAIT UNTIL THE RICE COOKER HAS COOLED DOWN COMPLETELY BEFORE CLEANING IT.

DO NOT USE ABRASIVE AGENTS, SCOURERS OR METAL UTENSILS TO CLEAN THE INNER POT AS THESE WILL DAMAGE THE NON-STICK COATING.

USE ONLY A DAMP CLOTH TO WIPE THE OUTSIDE AND INSIDE OF THE BODY OF THE RICE COOKER.

NEVER IMMERSE THE BODY OF THE RICE COOKER IN WATER, NOR RINSE IT UNDER THE TAP. WIPE THE HEATING ELEMENT WITH A DRY CLOTH.

IMPORTANT

- READ THIS USER MANUAL CAREFULLY BEFORE YOU USE THE APPLIANCE.

DANGER

- NEVER IMMERSE THE HOUSING OF THE COOKER IN WATER, NOR RINSE IT UNDER THE TAP.

WARNING

- CHECK IF THE VOLTAGE INDICATED ON THE APPLIANCE CORRESPONDS TO THE LOCAL MAINS VOLTAGE BEFORE YOU CONNECT THE APPLIANCE.
- ONLY CONNECT THE APPLIANCE TO ANY EARTHED WIRE SOCKET. ALWAYS MAKE SURE THAT THE PLUG IS INSERTED FIRMLY INTO THE WALL SOCKET.
- DO NOT USE THE APPLIANCE IF THE PLUG, THE MAIN CORD OR THE APPLIANCE ITSELF IS DAMAGED.
- REPLACE THE MAIN CORD IF IT IS DAMAGED IN ORDER TO AVOID A HAZARD.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSON (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- KEEP THE MAINS CORD OUT OF THE REACH OF CHILDREN.
- DO NOT LET THE MAINS CORD HANG OVER THE EDGE OF THE TABLE OR WORKTOP ON WHICH THE APPLIANCE STANDS.
- MAKE SURE THAT THE HEATING ELEMENT, THE MAGNETIC SWITCH AND THE OUTSIDE OF THE INNER POT ARE CLEAN AND DRY BEFORE YOU PUT THE PLUG IN THE WIRE SOCKET.
- DO NOT COVER THE STEAM VENT AND THE LID WHILE THE RICE COOKER IS OPERATION.
- DO NOT PLUG IN THE APPLIANCE OR OPERATE THE CONTROL PANEL WITH WET HANDS.

